INTERCOM SYSTEM

SUITABLE FOR NURSE CALL AND SCHOOL INTERCOM



Nurse Call


The Nurse Call System is the most important system of communication for daily nursing and emergencies. The purpose of a Nurse Call System is to create a convenient and warm environment, and improve the service of the hospital.

With 2-way voice communication, the system allows nurses to efficiently diagnose the patients' needs in a timely manner.

School Intercom

With one Master Station and 999 potential Sub Stations/Intercoms, the 2-way voice communication system supports calls between single classes, group calls, announcements, class monitoring and call recording.

The administration software stores all sub-station information for ease of use.

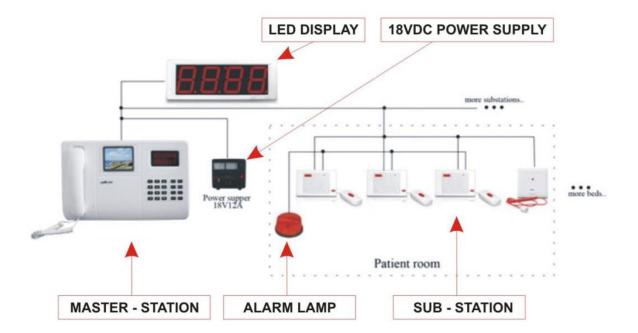







Master Station

Has the ability to manage up to 999 stations, with twoway communication, group calls, monitoring and recording.

The 16 x 4 LCD screen clearly displays 4-digit substation/patient room/classroom numbers.

The Master Station stores the last 10 incoming calls for quick call-backs.



Loud Speaker Intercom

Installed in every classroom, the two-way communication allows reception / the principal to communicate with one class, a group of classes or make public announcements.

When connected to the master station, the intercom can record calls and monitor classrooms.



Alarm Lamp

Installed above doors to patient rooms where nurses can see the alarm flashing from the nurses' station or the corridor.

The light turns on when the corresponding sub-station is calling. The light turns off when the call is answered or reverts to idle.







Pull Cord Sub-Station

Installed in restrooms in hospitals for patients to call nurses in emergencies or for assistance.

The cord and the button, when activated, send a message to the master station immediately, alerting nurses to the patients' needs.

The waterproof, flush mount design ensures longevity.



Sub-Station

Installed above each patient's bed for ease of use, the patient is able to press the button on the handy remote or the sub-station to call for a nurse.

Two-way communication to the master station allows nurses to meet the patients' needs in a timely manner.

The sub-station is connected to the corresponding alarm lamp, effectively guiding the nurse to the correct room.



LED Display

The patient's 4-digit number will be displayed when the corresponding sub-station is activated

When not active with a call, the LED screen will show the time.



